


How to use your love egg

- ♥ Twist the egg anticlockwise to unscrew. Insert the 2 x N batteries, following the diagram printed on the compartment and twist back together.
- ♥ Press and push down on the back of the remote to remove the battery cover. Insert the A23 battery, positive-side facing down. Replace the battery cover.
- ♥ Click the power button on the remote to start the vibrations. Use the function button to move through the 3 speeds and 7 vibration patterns.
- ♥ Click the power button on the remote to switch off. Clean your love egg with sex toy cleaner and leave to dry until next time.
- ♥ Use with plenty of water-based lubricant for maximum enjoyment.
- ♥ You **MUST** remove the batteries from the egg after use and store separately. Leaving the batteries in this toy will cause the batteries to drain quickly.

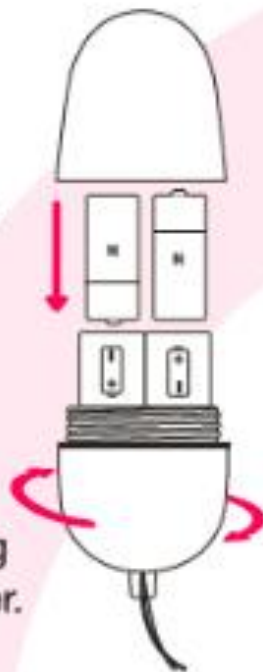

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help