

THE
RABBIT
COMPANY™

OVERVIEW

All products by **The Rabbit Company™** are made from soft, smooth, body safe materials.

Our easy to use interface allows users to easily find the right stimulation and intensity. Get ready for sensual satisfaction that can not be matched and will have you craving for more.

The BJ Rabbit™



External Stimulator

Control/
LED Indicator

DC Charging Port




GETTING STARTED

1. Before first use, charge your rabbit for approximately 2 hours. The USB charging cable can be plugged into any USB port or USB / AC power adapter (not included).

- Flashing Light = Charging
- Solid Light = Fully Charged
- Rapid Flashing Light = Low battery, charge is needed

2. Wash your rabbit with soap and water, or toy cleaner suitable for use with silicone items.

 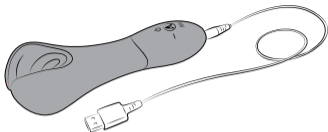






FAQs can be found at
www.TheRabbitCompany.com

Email us at
customercare@TheRabbitCompany.com
for any unanswered questions


3. Lubricate your rabbit (if needed) with a water based, silicone compatible lubricant.

4. Turn ON your rabbit by pressing 

 




 
5. To change the vibration intensity, and/or rotation speed press and release  and 

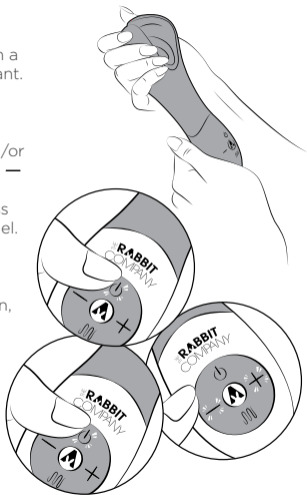6. To change the mode in the shaft press and release  depending on the model. Holding either  for 3 seconds will independently turn OFF the vibration, rotation and / or thrust. Once OFF, a single push of  will turn the vibration, rotation, and / or thrust back ON.

7. To power OFF your rabbit press the  button.




CONTROLLING YOUR RABBIT

- To turn the item ON / OFF press and release 
- Press and release  to increase vibration intensity
- Press and release  to decrease vibration intensity
- To change the independent vibrator in the shaft press and release 
- Holding  for 3 seconds will turn OFF the independent shaft vibrator, pressing and releasing  will turn the shaft back ON



CHARGING

- Insert the charging plug in the designated charging area
- Flashing light indicates item is charging

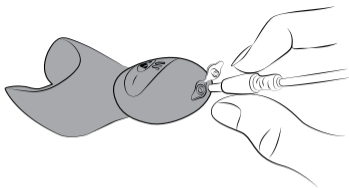

- Solid light indicates item is fully charged
- Rabbits require approximately **2** hours for full charge

Flashing light = Charging




Solid light = Fully Charged



TRAVEL LOCK

- All rabbit items include travel lock for safe and convenient travel
- While the rabbit is powered OFF, simultaneously press and hold the **+** and **-** buttons for 3 seconds. Flashing light will indicate the item is locked
- To unlock simply press and hold the **+** and **-** again for 3 seconds. Flashing light will indicate lock is disabled

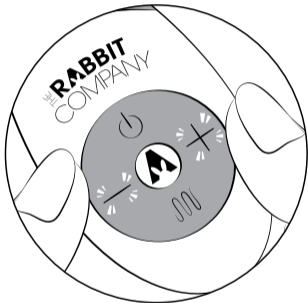

VIBRATION PATTERNS

Vibration pattern 1 

Vibration pattern 2 

Vibration pattern 3 

Vibration pattern 4 

Vibration pattern 5 

Vibration pattern 6 

HARE CARE™

Cleaning, Storage & Safety



1. Always clean your Rabbit thoroughly before and after each use.
2. We recommend using a premium water-based lubricant when needed. Silicone-based lubricants are not recommended and can cause damage to the product. Never use hand cream, or massage oils as lubricants for your intimate areas.
3. To properly clean your rabbit, use a suitable silicone-compatible toy cleanser. If this is not available, wash the silicone area of your rabbit with luke-warm water and an antibacterial soap. Rinse clean and pat dry using a lint-free cloth or towel. Do not use cleaners containing alcohol, petrol or acetone.



4. Avoid leaving your rabbit in direct sunlight and never expose it to extreme heat.

5. Our products are designed to be splash-proof. Never immerse your rabbit in water.

If your rabbit appears to function abnormally, turn OFF and consult our customer care section on **TheRabbitCompany.com** where you will find help tips. Should you require further assistance please contact: **customercare@TheRabbitCompany.com**

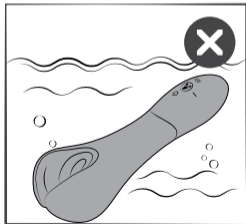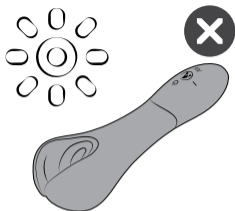

SPECIFICATIONS

Materials

Silicone

Size

58 x 47 x 195 mm

Weight

208 g

Battery

Li-ion 750 mAh

Charging

2 hours

Use Time

1 hour

Max Noise Level

<68 db

Interface

6 vibration patterns

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):

The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.



RoHS



Complete user instructions in
additional languages can be
found at:

www.TheRabbitCompany.com

Designed and Developed by
The Rabbit Company™

Made in China
© The Rabbit Company™

FAQs can be found at
www.TheRabbitCompany.com

Email us at
customercare@TheRabbitCompany.com
for any unanswered questions

TheRabbitCompany.com